

## FUYL Tower Locker

### Quick guide

The FUYL Tower is an integrated secure storage and charge station for mobile devices.

#### GENERAL USE

##### Renting a New Locker

Type locker number  
to lock/unlock■■■

The user approaches the locker and begins typing a locker number.

When renting a new locker, the user should identify a locker that is unlocked and make that selection.

Select Locker  
12 OK

Locker number must be 1 – 15.  
Press OK to select when finished.

Locker is free: 12  
PIN to reserve: \*■■■■

The user is prompted for a 4 digit PIN to lock the door.

NOTE: If the locker was not free, the display will indicate that the locker is LOCKED.

Locker is free: 12  
Confirm PIN: \*■■■■

The PIN must be confirmed by the user and must be a correct match before the door can be locked.


Insert items & push  
firmly on door■■■

Place mobile device in locker and connect to charging socket.


Locking...■■■

Close the door firmly and the door will latch.  
It is now safe to leave the locker.


## Returning to a Locker

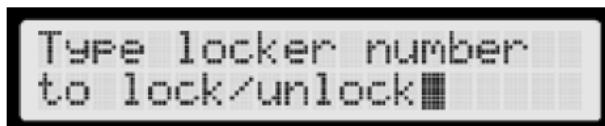


The user approaches the FUYL Tower to reclaim their charged device.

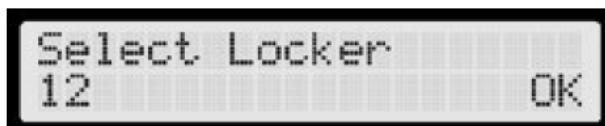

Select the number of the locker where the mobile device has previously been stored.

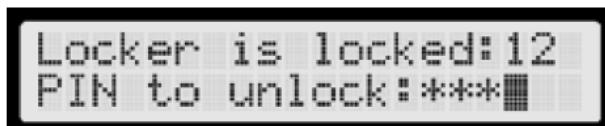

The locker is unlocked with the originally entered PIN code.

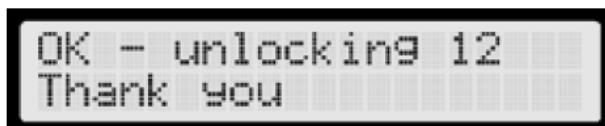

Now the user can reclaim their mobile device and is free to leave the locker.

## Too many PIN Attempts

When attempting to unlock a locker, the user will be given 3 pin entry attempts. If 3 incorrect attempts are made, that locker will be disabled for 60 seconds before another entry attempt can be made.

The Fuyl Tower Lockers are situated in the building A near the break area.

